 

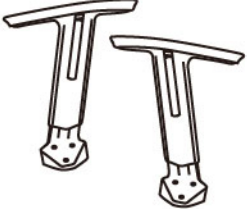
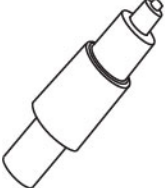



 
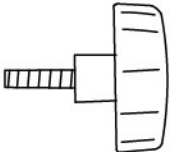


 

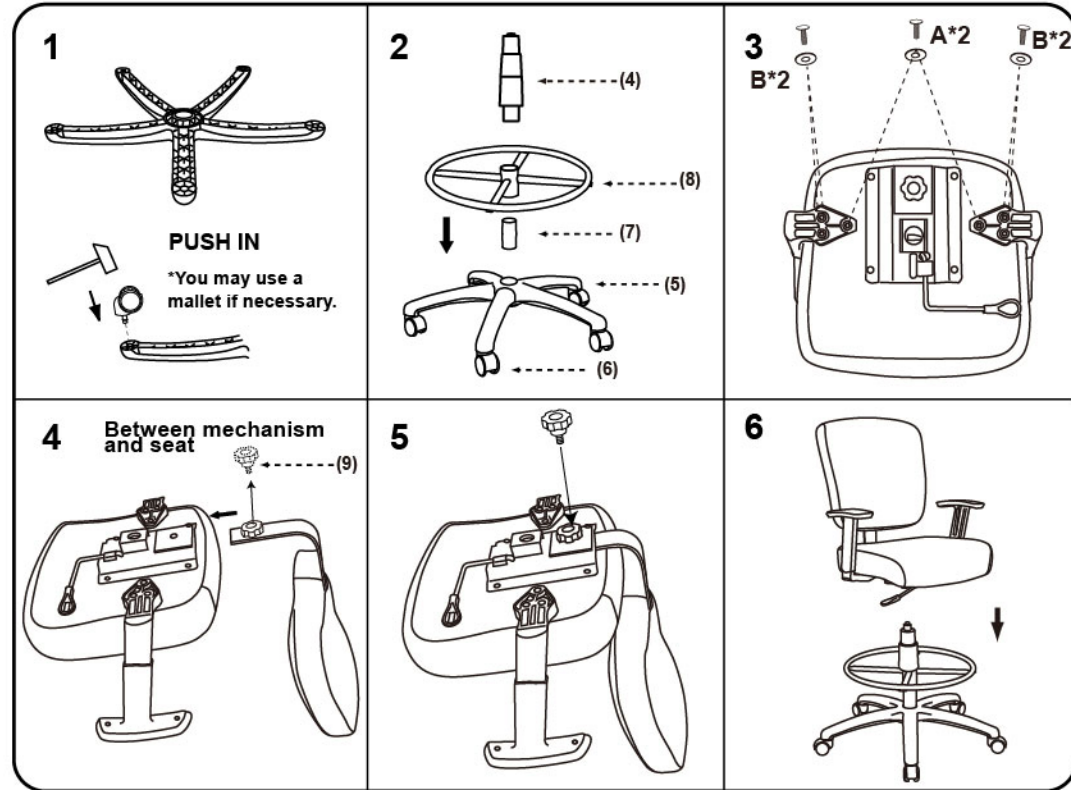


**IMPORTANT NOTICE:  
HARDWARE PACKAGE IS ATTACHED ON THE  
BOTTOM OF SEAT CUSHION.**

MODEL: B1681

(1)x1  Back Cushion	(2)x1  Seat Cushion	(3)x1 (L)x1 (R)  Left-Arm-L Right-Arm-R
(4)x1  Gas Lift W/ Cover	(5)x1  Base	(6)x 5  Caster
(7)x1  TU009-EXT	(8)x1  TU009	(9)x1 
(A)*2   M6*25 Arm Screws		
(B)*4   M6*40 Arm Screws		



**Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using.  
This chair is only intended for sitting. Any other use will void the warranty.**

