


 
 





Assembly Instructions


MODEL NO.:N153

HUTCH / BOOKCASE


TUN010CL	TUN011KC	C	TUN026	TUN020SG	TUN030AG	G
A 	B 		D 	E 	F 	G 
Cam lock 20Pcs+1Pc(spare)	Klix Cam 20Pcs+1Pc(spare)	Cam Cover 20Pcs+1Pc(spare)	Dowel 14Pcs+1Pc(spare)	Shelf dowel 4Pcs+1Pc(spare)	Adjustable Glide 4 Pcs	screw $\phi 6 \times 30$ 4Pcs

 STEP1





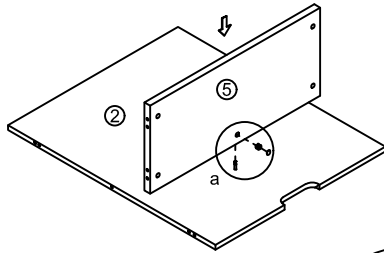


IMPORTANT:
FUNCTION OF KLIX CAM
 1/4 RIGHT
TURN FOR
LOCKING
MAKE SURE THE ARROW IS
POINTING UPWARDS BEFORE
INSERTING INTO THE PANELS
HOLE


 
STEP2

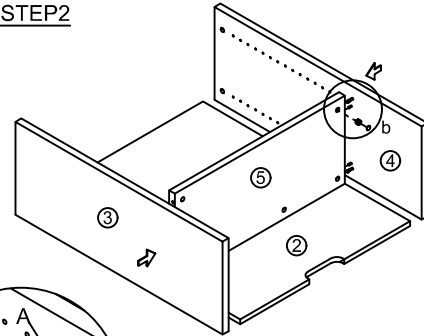

     
STEP3

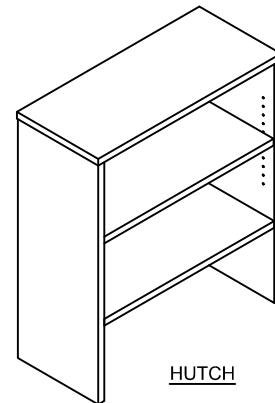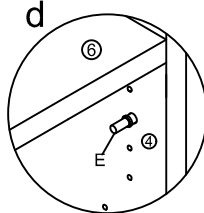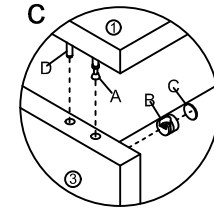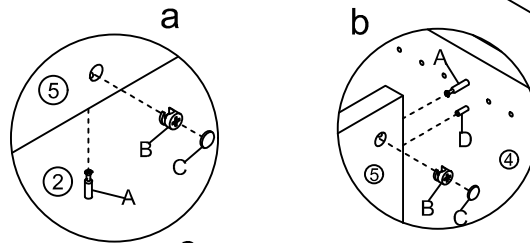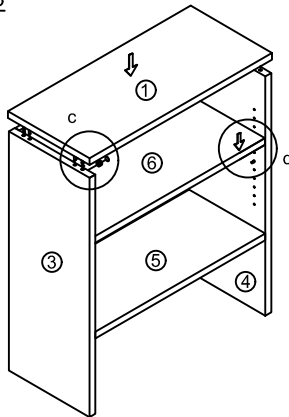

  STEP4 (BOOKCASE)

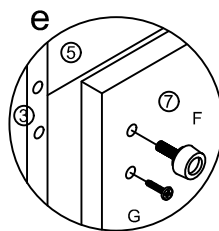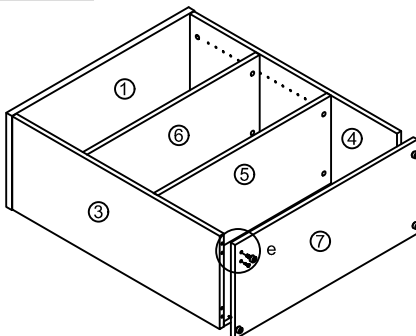

COMPLETED ASSEMBLY

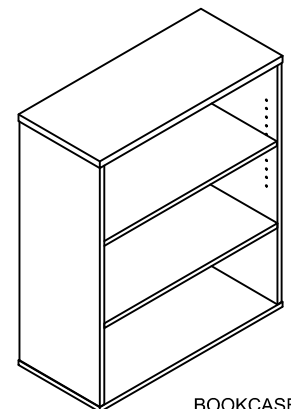 

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.boschair.com