 
 




Assembly Instructions  
**MODEL NO.:N168/N169**  
 GALLERY DESK

TUN010CL	TUN010KL	C	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN017BG/SG
 Cam lock 23Pcs+1Pc(spare)	 Klix Cam 23Pcs+1Pc(spare)	 Cam Cover 28Pcs+1Pc(spare)	 Dowel 8Pcs+2Pc(spare)	 Adjustable Glide 4 PCS	 6Hole L-Bracket 8Pcs	 screw#4*5/8" 37Pcs+1Pc(spare)	 80mm Grommet 2 Pcs

**STEP1**

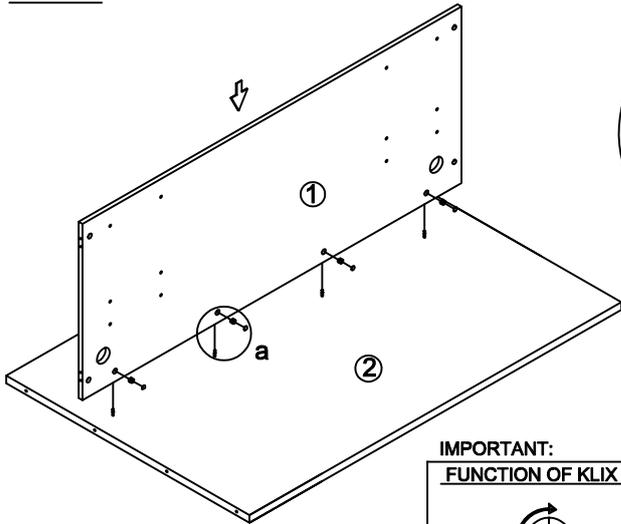

**STEP2**


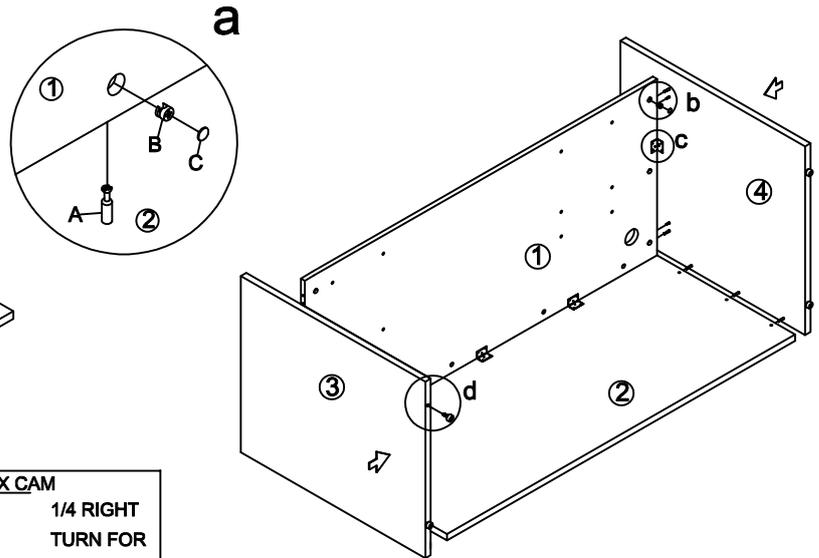


**IMPORTANT:**  
**FUNCTION OF KLIX CAM**


 1/4 RIGHT  
 TURN FOR  
 LOCKING

MAKE SURE THE ARROW IS  
 POINTING UPWARDS BEFORE  
 INSERTING INTO THE PANELS  
 HOLE

**STEP3**

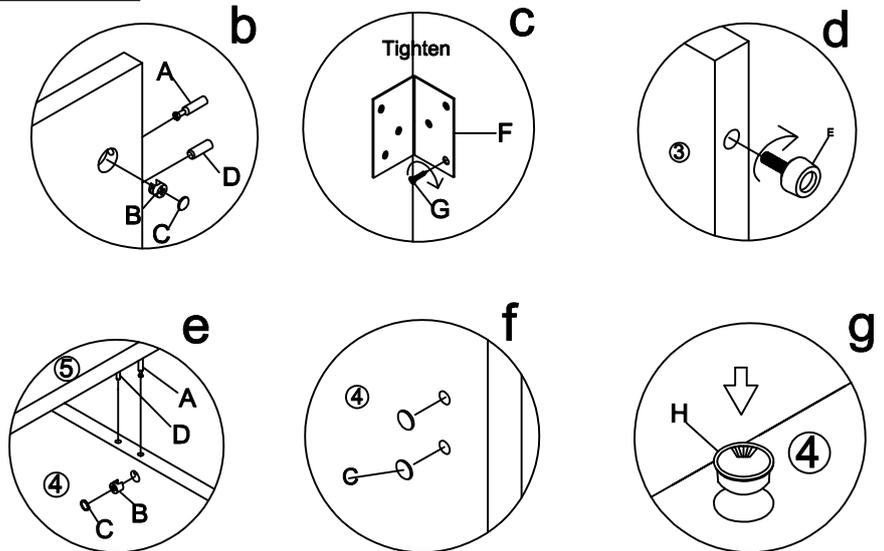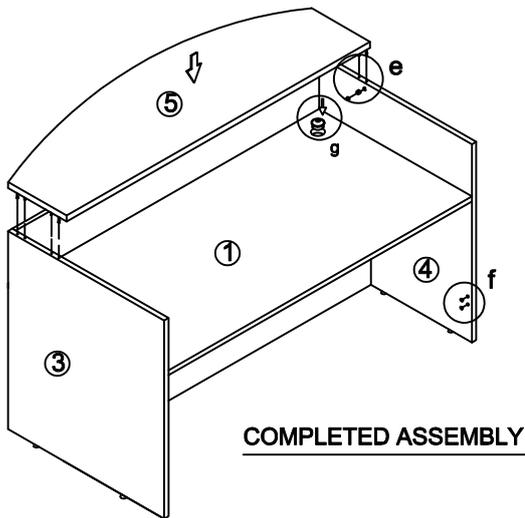

**IMPORTANT NOTE:**

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at [www.bosschair.com](http://www.bosschair.com)