
IMPORTANT NOTICE: HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

MODEL: B9530 B9535 YS12 YS112

(1)x1	(2)x1	(3)x1
4	Arm-Left	Arm-Right
(4)x1	(5)x1	
(A)X2 (A)	M6 X 12 SCREWS FOR BOTTOM TUBE	
(В)Х2 ()	LONG BLACK SCREWS FOR TOP TUBE AND SEAT	
(C)X2 ()	SHORT SILVER SCREWS FOR BACKREST	
(D)X1	ALLEN KEY	

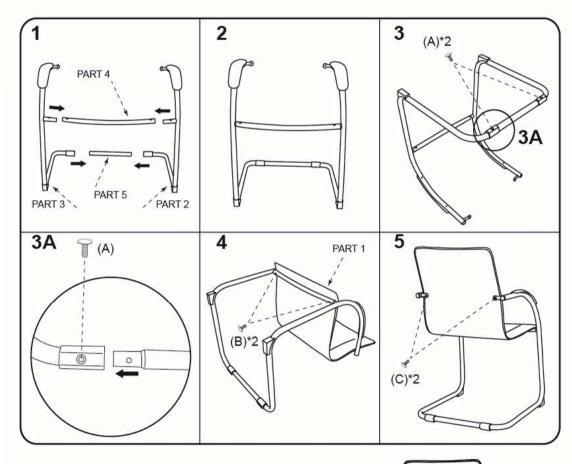

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

